

P40122COR

Operating Instructions (TPM-1)

Features

- ◆ Insert Panel
- ◆ In and out dual-way temperature measuring
- ◆ Clock display function

Parameters

- ◆ Temperature range: $-50^{\circ}\text{C} \sim +70^{\circ}\text{C}$
- ◆ Resolution: higher than -20°C , 0.1°C ; no more than -20°C , 1°C .
- ◆ Power: 1.5 V One 7# battery

Operational Instructions

Switch between in and outside temperature measuring

- ◆ When electrified for 2 seconds to measure inside temperature and the LCD will display IN.
- ◆ Press key [FSW] to switch into outside temperature measuring and the LCD will display OUT.
- ◆ When the temperature measured is no less than 70°C , LCD will display $H^{\circ}\text{C}$ in its first digital place.
- ◆ When the temperature measured is no more than -50°C , LCD will display $L^{\circ}\text{C}$ in its first digital place.

Clock Function Setting

- ◆ Press key [FSW] to switch LCD into clock display.
- ◆ Press key [HR] to adjust H and if pressed more than 2 seconds, it will be adjusted quickly.
- ◆ Press key [MIN] to adjust MI and if pressed more than 2 seconds, it will be adjusted quickly.

Power On/Off

- ◆ Press [FSW] 4 seconds to turn off the machine, but the clock continues working.
- ◆ Press key [FSW] to turn on the machine.